



RAND McNALLY SD CARD UPDATE PROCESS

Note: The Rand McNally Dock application is required to preform the update process as well as an internet connected computer with an SD card port or Card Reader.

XiteSolutions

Updating your Rand McNally SD card with the Rand Dock Application on MAC

Before attempting this procedure, please read this document fully to ensure correct step by step process

This process requires the most up to date version of **Rand Dock** to complete.



1. Remove your Rand McNally SD card from the Xite radio. and make sure the LOCK tab is in the up position towards the word LOCK.







2. Insert Rand McNally SD card into SD reader



Download the Rand Dock Software here:

3. https://www.randmcnally.com/support/s/dock-software

Be sure to select the version appropriate to your Mac OS version.

4. Open your Downloads folder and find the SetupRMDock.pkg file. Press and hold the Control key and then click on the file. This should open the following dialogue box. Press Open.



- 5. Follow the Rand McNally Dock installation Instructions.
- **6.** Start Rand Dock (this may take a few minutes).



7. If you receive a Defective Card warning, please follow the on-screen instructions.



8. Click the Map Update Available option. **Note:** if your device is already up to date this will "Your Device Is Up to Date" see step 13



9. Click the Begin Download button.



10. This is a large download and may take some time.



11. When complete click Install Update.



12. The update will now transfer to your Rand McNally Card.







14. When complete click Install Update.



It is suggested that you synchronize your Rand McNally card before each trip to maintain the most recent information including construction data etc. This is done by clicking the Update Available option when the card is inserted while the Rand Dock is running.



15. Return to the radio and power it on without installing the Rand McNally SD Card. Wait for it to complete booting and go to the Main Menu. Select Navi and when the app asks for the SD card reinsert it into the SD card slot. The card will click into place when properly inserted.